

**TEMPORARY REVISION NO. 25
TO PC-12 PILOT'S OPERATING HANDBOOK
REPORT NO. 02211**

SECTION 4 – NORMAL PROCEDURES

This Temporary Revision adds a new step for the Preflight inspection and affects Section 4, page 4-7.

Record the incorporation of this Temporary Revision on the Log of Temporary Revisions.

SECTION 4 – NORMAL PROCEDURES

4.3 PREFLIGHT INSPECTION

4.3.8 COCKPIT

- | | |
|---|---|
| 1. Flight Control Lock | REMOVED and placed in
STOWAGE POINT |
| 2. Parking Brake Handle | SET/PUSH BRAKE PEDALS |
| 3. MASTER POWER switch | ON and guarded. Check condition of
guard |
| 4. External Power switch | OFF |
| 5. BATT 1 switch | OFF |
| BATT 2 switch | OFF (if 2 nd battery installed) |
| 6. GEN 1 & GEN 2 switches | OFF |
| 7. AV 1 and AV 2 Bus switches | OFF |
| 8. NON ESS OVRD switch | AUTO |
| 9. STBY BUS switch | ON |
| 10. EXTERNAL LIGHTS switches | OFF |
| 11. FUEL PUMPS switches | AUTO |
| 12. IGNITION switch | AUTO |
| 13. DE-ICING switches | OFF |
| INERT SEP switch | OFF |
| 14. COOLING SYS switch | OFF |
| 15. HEATING switches | OFF |
| 16. PASS-WNG switches
(if installed) | OFF |

